



Seal Kit

Seal Kits Installation and Ordering O-Ring and Backup Ring Position

 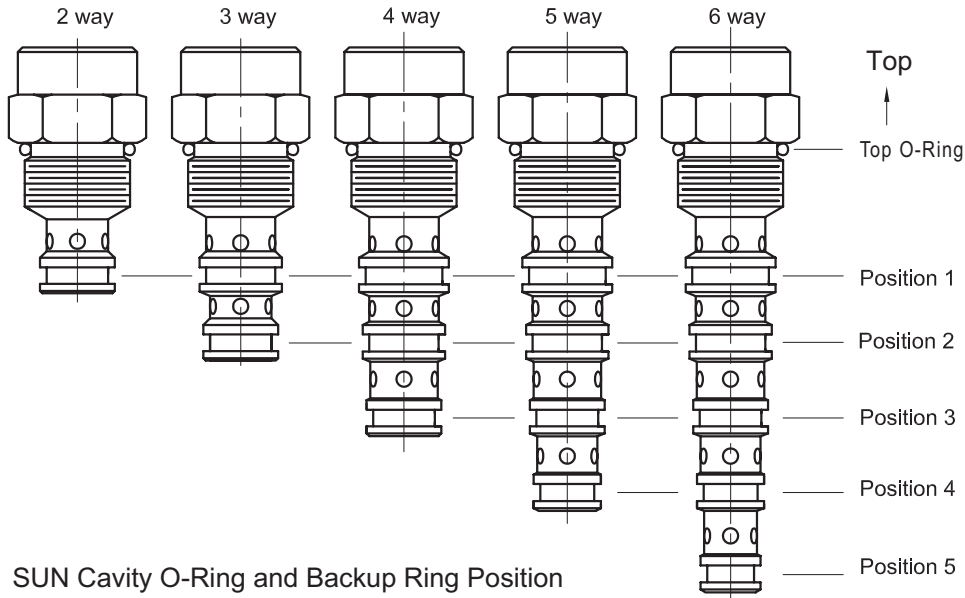


SUN Cavity O-Ring and Backup Ring Position

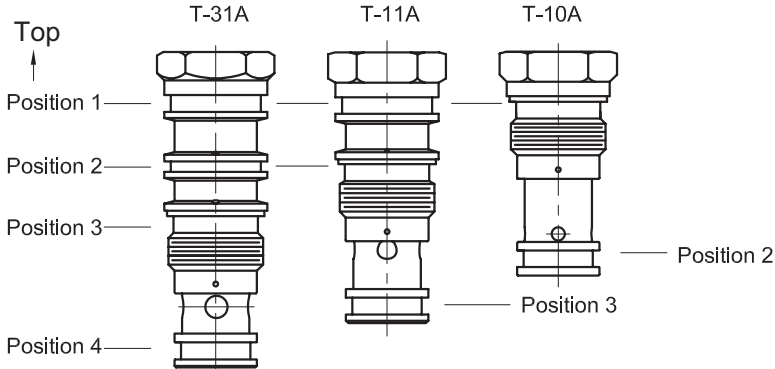


O-Ring and Backup Ring Installation

Installation Type T (O-Ring installed toward top of cavity)



 
Installation Type B (O-Ring installed toward bottom of cavity)




Installation Type X
(No seals this location)



 
Installation Type M (O-Ring installed between backups)



 Installation Type O
(O-Ring installed only, no back-ups)



TO ORDER

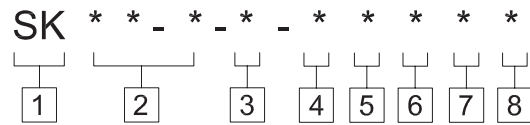

1 Seal Kits

2 Cavity

08-2=08-2 Cavity T-11A=SUN T-11A Cavity

3 Seals

N=Buna N V=Fluorocarbon

4 **5** **6** **7** **8** Installation Type

4= Position 1 (Required for 2,3,4,5 & 6-Way Valves) **7**= Position 4 (Required for 5 & 6-Way Valves)

5= Position 2 (Required for 3,4,5 & 6-Way Valves) **8**= Position 5 (Required for 6-Way Valves Only)

6= Position 3 (Required for 4,5 & 6-Way Valves)

T=O-Ring toward top of cavity

M=O-Ring between backups

B=O-Ring toward bottom of cavity

O=O-Ring; no back-ups

X=No seals this location

SK08-2-N-B 08-2 NBR B Type

SK10-3-V-MM 10-3 FKM MM Type

SKT-11A-N-BTB T-11A NBR BTB Type