# LSV-08-3-L

3-Way,2-Position, Poppet-type Solenoid Valve

#### **DESCRIPTION**

A solenoid operated, 3-way, 2-position, poppet-type cartridge valve.

#### **OPERATION**

When de-energized, the valve allows flow from ② to ① or from ① to ② ,while blocking flow at ③ . When energized, the valve allows flow from ② to ③ or from ③ to ② , while blocking flow at ① .

# **Operation of Manual Override Option**

To override, push button in to activate. To return to normal valve function, release button.


#### **SPECIFICATIONS**


#### **SYMBOL**




Operating Pressure	
Flow	See PERFORMANCE CHARACTERISTIC graph.
Internal Leakage	<1 drops/min.Our ideal leakage: 0.05 drops/min
Temperature	-40°F to +212°F(-40°C to +100°C)
Coil Duty Rating	Continuous from 85% to 115% of nominal voltage
Filtration	See page N-1
Fluids	Mineral-based fluids with viscosities of 7.4 to 420 cSt.
Cavity	08-3,See page M-1
Housing Material	Steel & Ductile iron rated to 350bar

# PRESSURE DROP VS.FLOW

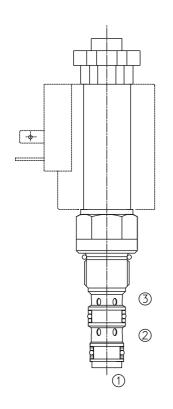


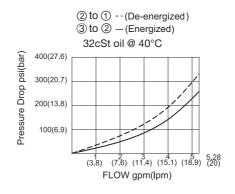

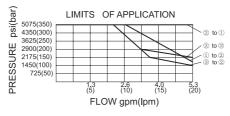



## **TO ORDER**

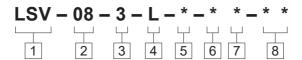

**VDC** 

1 Function

LSV=Solenoid Valve

2 Size

08=08 Size

3 Flow Path

**3**=3-Way

4 Internal Leakage

L=Zero Leakage

5 Manual Override Options

Omit=None

M=Manual Override

6 Coil Voltage

**1**=12

**2**=24 **VDC** VAC

3=110

4=220 VAC

7 Coil Connector Type

D= Double Lead

H= Hirschmann

S= Single Lead

ER= Deutsch Connector(Water-proof Coil)

B= Double Spade

8 Port Size

Omit=None

4T=SAE 4

6T=SAE 6

2G=G 1/4

**3G**=G 3/8

**X**See page K-2 for detail of

housing

**X** Other port sizes are available

### **INSTALLATION DIMENSIONS**

Coil Must Be Installed With Letter Up

Unit=Millimeters

